Collection:Merce

Installation manual for:

LD6013D20 D20″H12.75″ L1

Installation instructions:

1. Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
2. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
3. "E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
4. Secure mounting bracket to the junction box.
5. Insert screws（P2） in side of top unit the mounting bracket.
6. Hang the metal shade(P10) to the chain(P8) and connect the canopy lock(P7).
7. Put the canopy(P3) on the nipple(P4) and connect the canopy lock(P7),then use the canopy ring(P6) to screw tighten.
8. Install E26 light source,no include bulb.

The end!

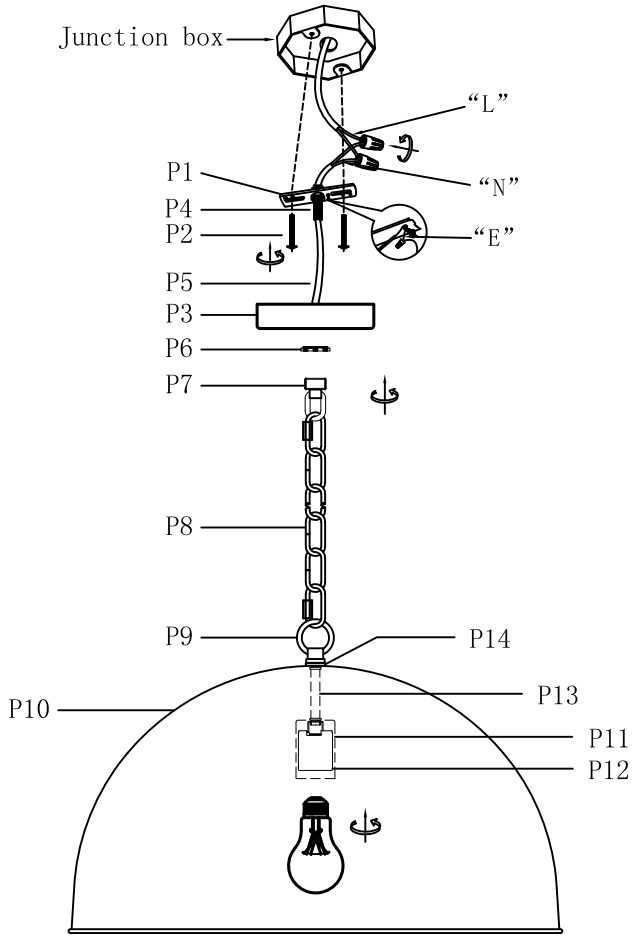

PARTS LIST

part	picture	Description	Qty	Check list
P1		L4″ Mounting bracket	1	
P2		5/32-32 Screw	2	
P3		D4.7″ Canopy cover	1	
P4		Nipple	1	
P5		Power Cord 7.6',18AWG, SPT-1 Gold/Black	1	
P6		Canopy ring	1	
P7		Canopy lock	1	
P8		L5'CHAIN04P Plain Design	1	
P9		D1.5″ Loop	1	
P10		D20″*H11″ Lamp shade	1	
P11		Socket cover	1	
P12		E26 Socket	1	
P13		L3.23″ Both end threaded pipe	1	
P14		Washer	1	

"L" = Hot wire
"N" = Neutral wire
"E" = Ground wire